

\$2010



Cosy Bathroom

\$2010 Instruction manual

NOTICE OF ASSEMBLE

Tips for assembling

1. Because this product contains small parts, children need to use this product with an adult to avoid accidental ingestion and cause suffocation hazard. There are sharp objects in the product, be careful not to pierce people to avoid injury.
2. After all the materials are used in the required amount in the operation steps, put the remaining materials back into the original bag until the installation is completed. (Avoid losing materials during the installation process)
3. The unit of dimension marked in the step diagram is "cm".
4. Tips for making template paper: Put the template on the back of the material, fix it with some small double-sided tape, and then cut out the material to prevent the cloth or template from moving in the cutting process, or causing errors in the cut material. Or lead to insufficient materials.
5. According to the "Parts Rule Example" at the bottom of this page, refer to the parts on the part number drawing, find the actual product and compare it with the bill of materials, and then install it after confirming that it is correct. (Wooden parts only)
6. It is not advisable to apply too much glue, so as not to wait for a longer time to dry, and overflow will affect the effect of the finished product.
7. There are unavoidable small deviations in the color of wood, fabric, and beads of different batches, without notice, thanks for understanding.

Tips for Assembling Wood



Find the corresponding block number, use a knife in the connection point gently press, you can take out the wood.



Use a knife to smooth out the burr.



Or use sandpaper to smooth out the burr

Testing on LED function


Be sure to test the LED lights before making the lighting, note that the LED white wire to the negative, gray wire to the positive reference to the following figure operation test.

1



DO NOT contact the LED wire end direct to the battery cell.

2



Use the provide battery holder. Make sue the correct polarity.


How to assemble the battery holder




1. Material and tools needed: - Battery holder, LED bulb, tape, screw driver and 2 pieces AAA size battery(not provided)



2. Use screw driver and take the lid off from the battery holder.

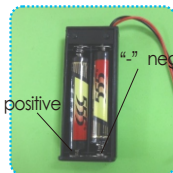


3. Insert the battery take notes on the polarity.

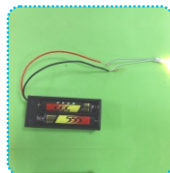

4. Connect the red wire to grey wire. Connect the black wire to white wire.



5. Wrap the exposed wire with the tapes.

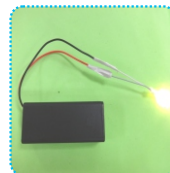

6. Place the box lid and fastness with screw driver.

Examples of parts rule:

A01: The parts are directly in the box; B01: The parts are in the B bag; C01: The parts are in the C bag, and so on (Note: The printing paper is displayed in the step A04-1: The printing paper is placed directly in the box, The part number is A04-1. In the step, the template paper A05-C01 is displayed, A05 is the template paper, C01 is the cutting template used for the corresponding material, C01-1, C01-2 are the part numbers for the parts, and the printing paper and template paper are directly placed in the packaging box.)

Contents

Name	Materials package
printing paper	A bag A04,A05(all of printing paper and template paper are in A04, A05;total 4pieces of A5 paper)
cabinet	B bag + C bag +D bag+ printing paper+ template paper page 3-4
storage cabinet	B bag +C bag+D bag+ printing paper+ template paper page 4-5
door	B bag+D bag + template paper page 5
shower	C bag+D bag page 5-6
mirror	B bag + D bag+ template paper page 6
carpet	D bag page 6
clothes basket	C bag+D bag+printing paper+template paper page 6-7
bathtub	B bag+C bag+D bag+printing paper+ template paper page 7
window	B bag + D bag page 7
outer frame	A bag + B bag+C bag+E bag+printing paper page 8-10
battery holder	E bag page 10
dust cover	Z bag + E bag page 11

Symbol description used



Install parts in the opposite direction



Install the same parts on both sides



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A



Pay attention to the direction of installation material A





Pay attention to the direction of installation material A




combination part according to the symbol so on.

Thumbnail of material list (reference only)

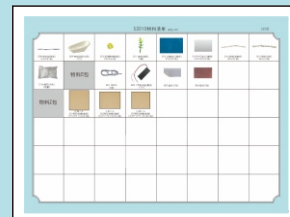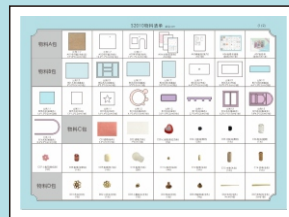

Thumbnail of printing paper & template paper (reference only)

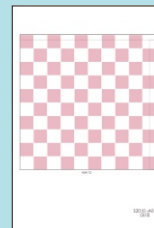

Method for using glue:

1. After applying the glue, let it dry for a few seconds before pasting.
2. Fix it slightly with your hands, and finally put it aside to dry;


Tips:

When pasting the plane printing paper, a piece of waste bank card or telephone card can be used to wipe evenly after the glue is smeared on the wood board, and then the printing paper is pasted to squeeze out the air inside.

Types of glue:


- White latex: Used for adhering soft materials, such as wood and paper.
- Alcoholic Glue: Used for adhering hard materials such as cloth, plastic, beads, wire, dust cover, etc.

Before making, cut out C01 according to A05-C01 template paper.

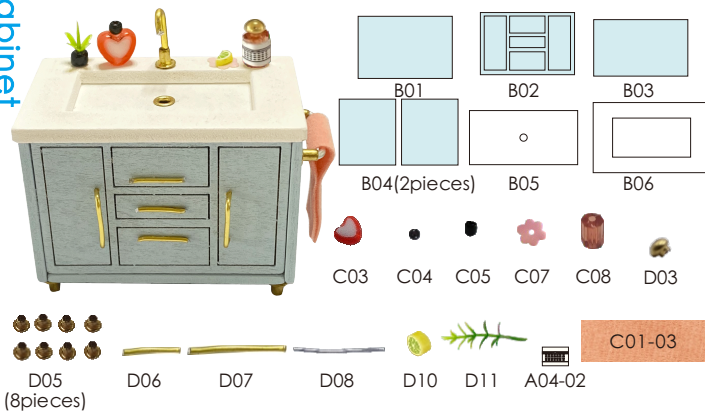

1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18

19

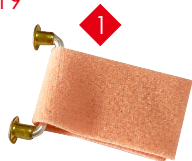

C01-03 fixed on ◆

20




Paste as shown.

21



22

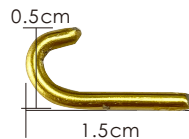

Bending as shown.

23



24



25



C03

26



Cut out as shown.

27



28



29



Place as shown.

30



31



D03

32



Cut out D10 in half


33



C07

Storage Cabinet

Before making, cut out C02 according to A05-C02 template paper.



B08(2pieces)



B09

B10

B07(2pieces)

C02-03

C02-03

C02-03



C06



D05















A04-03





31



Place as shown.

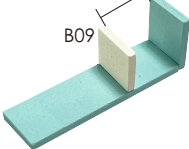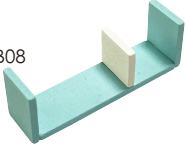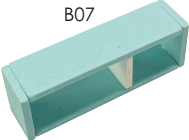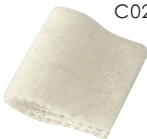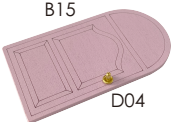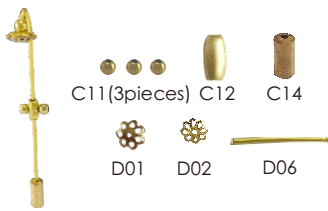
1  B07	2  1.5cm B09	3  B08	4  B07	5  B10	6  D05 C06
7  A04-03	8  C02-03	9  According to the previous steps to do three.	10  Paste as shown.	11  2	
Door Before making, cut out C01 and C02 according to A05-C01 A05-C02 template paper  B13 B15 D04 C01-01 C02-04					
1  B15 D04	2  B13	3  C01-01 Fold first.	4  C02-04 Paste as shown.		
5  paste as shown.	6  C01-01 (front)	7  Complete C02-04 according to the previous steps of C01-01.	8  complete photo.	Shower  C11(3pieces) C12 C14 D01 D02 D06	

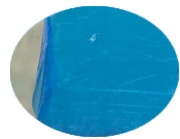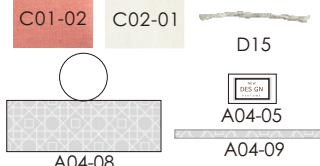1	 D06 6.8cm	2	 0.8cm 6cm Bending as shown.	3	 C11 C11 C12	4	 3cm C14	5	 C14	6	 D01 D02		
7	 C11 D01	8		Mirror Before making, cut out D12 according to A05-D12 template paper.  B11 D12-01		1	 Tear off the blue adhesive film of D12-01	2	 B11				
Carpet 				1	 D14  D15	2	 D15 35cm	3	 2.6cm	4	 D14 Affix two turns around D15.	5	
Clothes Basket 		Before making, cut out C01 and C02 according to A05-C01 and A05-C02 template paper.  C01-02 C02-01 D15 A04-05 A04-08 A04-09		1	 A04-09 A04-08(backside)	2		3		4	 A04-05		

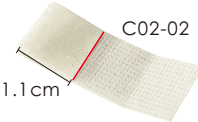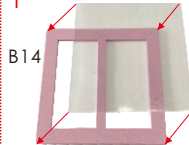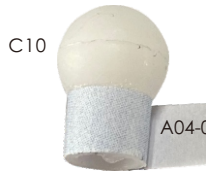9	 C01-02	10	 C02-01	11	 D15	12	 3cm	13	 D15 D15		
Bathub	Before making, cut out C02 according to A05-C02 template paper.										
	 C02-02 B12 C04 C09 C11 C13 D06 D09 D16 A04-06 A04-04		1	 C04 C09	2	 A04-06	3	 D06 1cm	4	 0.3cm 0.7cm bending as shown.	
	5	 C11	6	 C13 A04-04 A04-04 affixed to C13.	7	 D06 C11	8	 C02-02 1.1cm Paste edge.	9		10
11	 B12 A04-07 Paste as shown	12	 D16 Added proper amount of cotton.	Window		1	 B14 D13 Affix D13 alignment to the back of B14	1	 C10 A04-07	2	 2 pieces to be completed.

Outer frame


1

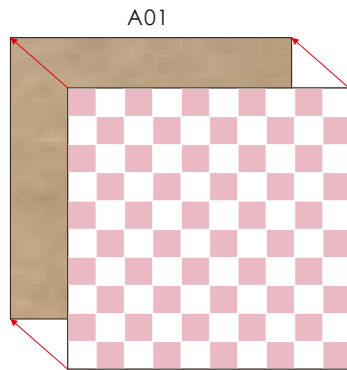

A01


A04-12

2

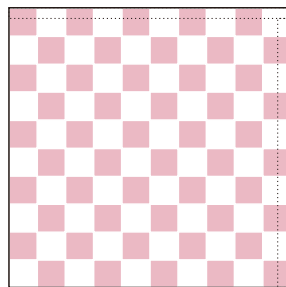

A01


3

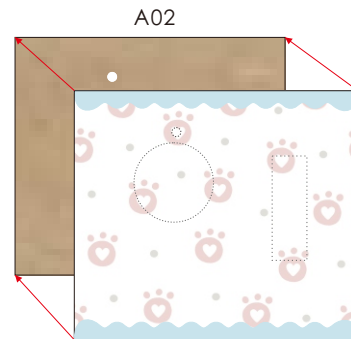

A02


A04-01

4

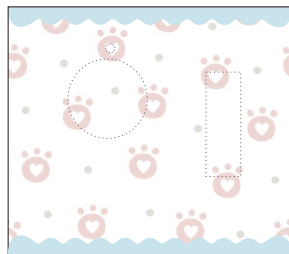

A02


5

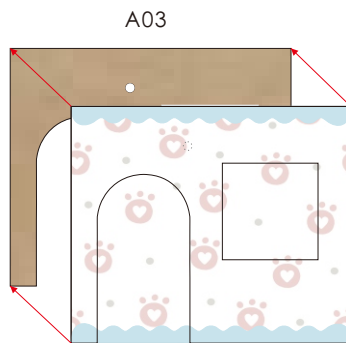

A03

A04-11

6

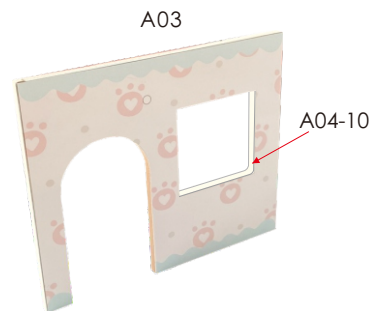


A03


A04-10

Empty the window of door A04-11

7

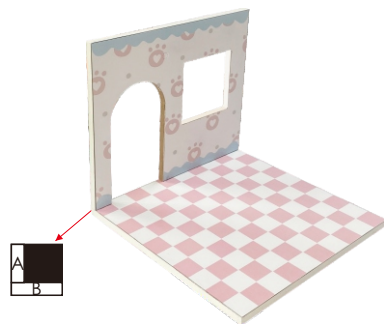


8

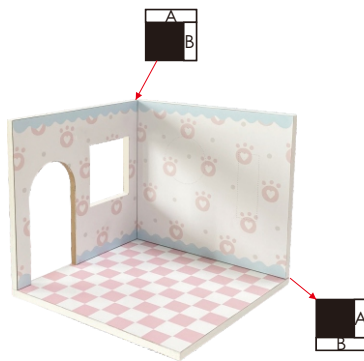

9



10

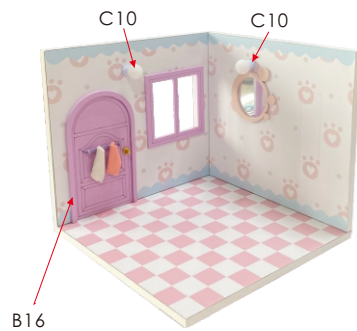

11



12



13



1 How to assemble the battery holder

Statement: the lamp wires cannot be inserted into the output socket.

- - Can use 2*AAA batteries
- - Please notice the place of anode and cathode when put in the batteries
- - Rechargeable batteries are not blunt electricity
- - Rechargeable batteries can only be charged under adult supervision
- - Rechargeable batteries should be removed from the toy before charging
- - Different types of batteries cannot mix; Do not mix new batteries in use with semi-used batteries.
- - Run out of battery should be removed from the toy
- - The power shall not be short circuit

2



E03

Tie the lamp wires together with E03 adhesive tape.

3




E03

E03

cut all the LED light wires to the same length
peel off the film of the LED light wires
and then wrap it together in the same color.

4

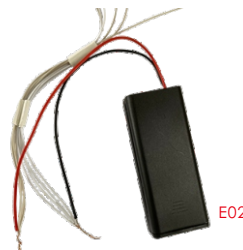

E02

Twist the following wire together:

- (I) BLACK wire from the battery box with the WHITE wire from LED bulb.
- (II) RED wire from the battery box with the GREY wire from LED bulb.

5



E03

E03

Wrap the bare wires with adhesive tape E03. Make sure the LED lights are on.

Installation of dust cover

Dust cover



scale:1:6
Z01 plexiglass(transparent)
13*13*0.13cm(1piece)




scale:1:6
Z02 plexiglass(transparent)
12.5*11*0.13cm(1piece)



scale:1:6
Z03 plexiglass(transparent)
12.37*11*0.13cm(1piece)

1 (plane display drawing)

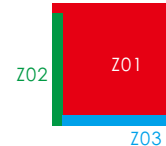

stick Z02 and Z03 on Z01


2

Ripped one side of kraft paper,
leaving one side of kraft paper




Take out the plexiglass and tear off the
kraft paper with text on each piece of
plexiglass

3

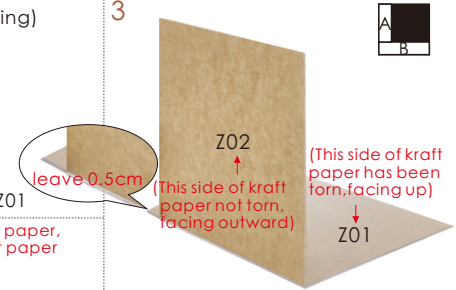


The kraft paper that has been ripped off
faces inwards, and the kraft paper that
has not been ripped out faces out wards.
Place Z01 to the right at a right angle of
90 degrees to Z02

4

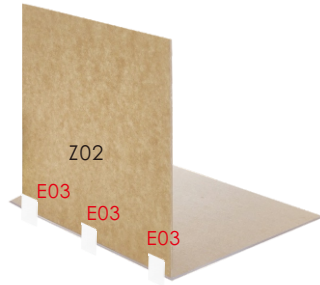

Use E03 to fix the junction of two pieces
of plexiglass. (use transparent tape to
replace E03)


5

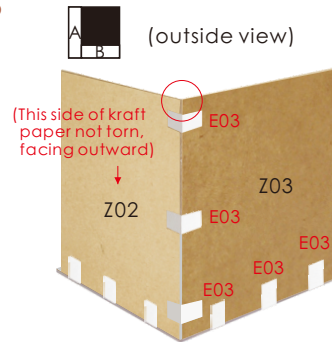

The junction of every two pieces of plexiglass
needs to be fixed with E03 (to prevent the
plexiglass falling off)

6


(inside view)

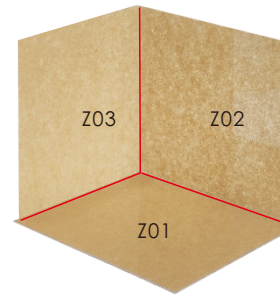

stick appropriate amount of glue to the interface of the
two pieces of glass and scrape it slightly to make the
glue penetrate into the junction of the two pieces of
glass (the red line is the plexiglass interface)

7


(Internal inverted transparent view)

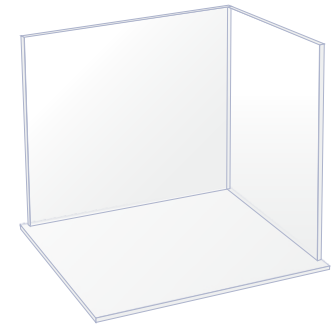

Leave it for 1 hour. After the glue dries out,
tear off a layer of kraft paper outside the
plexiglass.



Photo of Dust proof cover

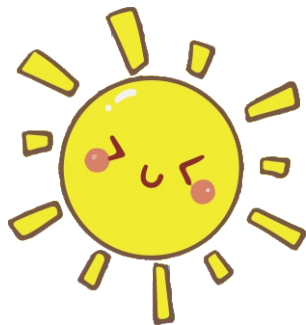

Great!!It had finished!
It can be combined with other designs,
would you like to see them?



FULL DISPLAY OF NINE SERIES



Living room



Bedroom



Study



Kitchen



Pet room



Bathroom



Cloakroom



Game room



Second bedroom

(Roof need to purchased separately)
Photos with roof



Two-in-one



(Photos for reference,can be combined in different by yourself)

Three-in-one



(Photos for reference, can be combined in different by yourself)

Four-in-one



(Photos for reference, can be combined in different by yourself)

Four-in-one



(Photos for reference, can be combined in different by yourself)

Six-in-one



(Photos for reference, can be combined in different by yourself)

Nine-in-one



(Photos for reference, can be combined in different by yourself)

The instruction manual should be keep, after assembled